


Series VLC856

Installation Guide

INSTALLATION

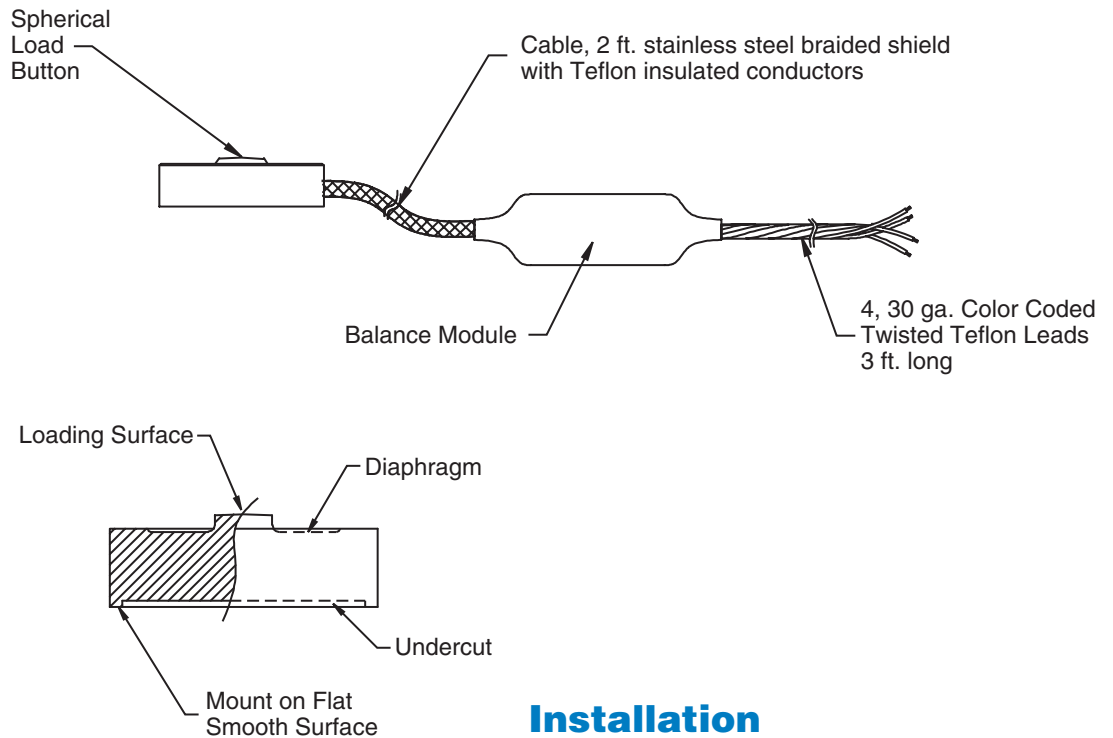

Installation

1. **CAUTION** - Do not load on diaphragm. Only load on loading surface (spherical button). Damage and/or false readings may occur if the diaphragm is loaded.
2. **CAUTION** - Do not overload. Low capacity load cells may be damaged if squeezed or handled incorrectly.
3. **CAUTION** - Do not let glue or other debris accumulate or be contained in the undercut area as this will result in incorrect readings and/or load cell failure.
4. For best results, load cells should be mounted on a flat, smooth surface.

Find For More Information at:
stellartech.com

Due to the nature of technology, changes are inevitable. For latest technical specifications, see our website.