


Series VLU850

Installation Guide

INSTALLATION

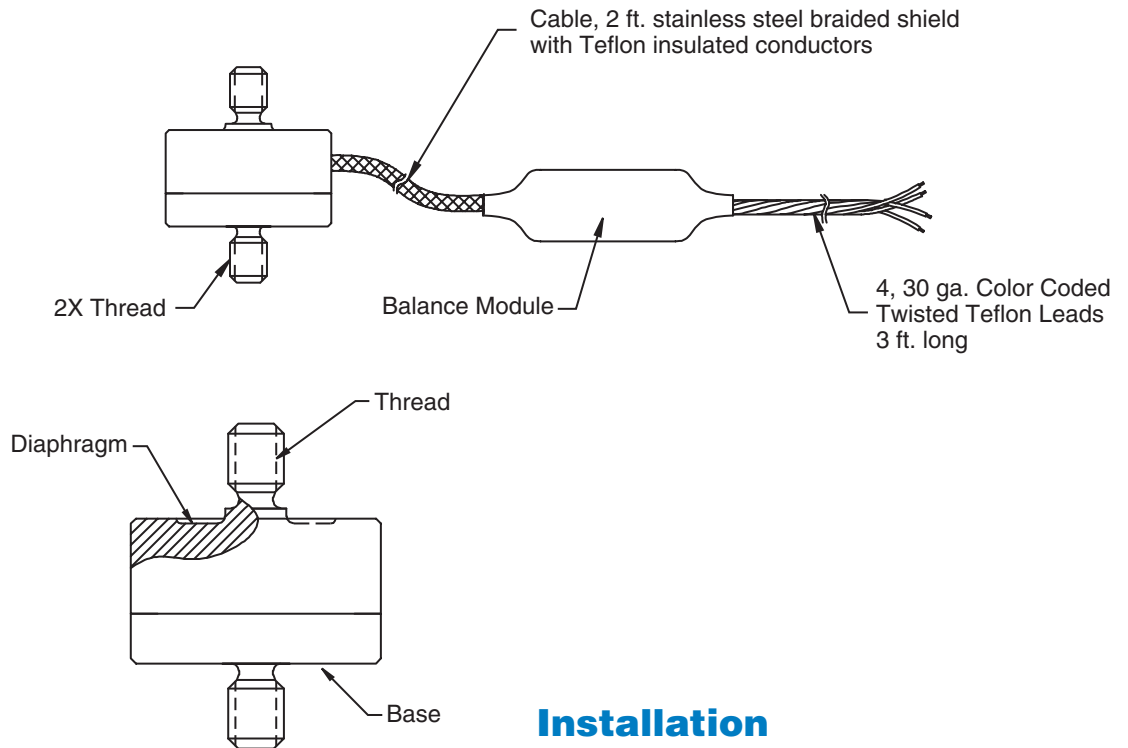

Installation

1. **CAUTION** - Do not over-torque the threads on installation (See chart, below). Over-torquing may result in damage to the unit.

Capacity	Thread	Max. Torque
10, 25, 50, 100	4-40 UNC	64 In-Oz
250, 500, 1000	1/4-28 UNF	90 In-Lbs

2. **CAUTION** - Do not overload. Low capacity load cells may be damaged if squeezed or handled incorrectly.

3. **CAUTION** - Do not load on diaphragm. Only load utilizing the threads. Damage and/or false readings may occur if the diaphragm is loaded..

Find For More Information at:
stellartech.com

Due to the nature of technology, changes are inevitable. For latest technical specifications, see our website.