

---


## WIRING INSTALLATION GT2350

---

### Scope

Detail wire connections and installation.


### Procedure

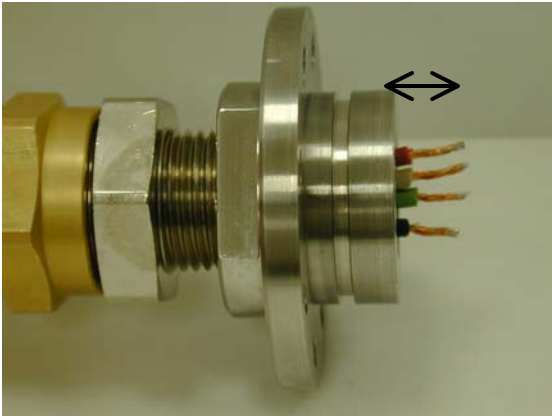

1. Cut wires to 7/16" (11mm).
2. Strip wires back 5/16" (8mm).



4. Insert assembly aligning green connectors.  
(Only one alignment possible)
5. Rotate receptacle to nearest hole alignment.
6. Bolt down receptacle.

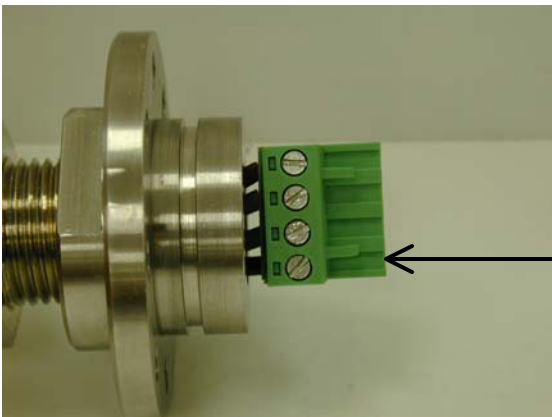

3. Insert wires into connector and tighten.  
(Pin 1 designated by arrow)

#### WIRING:

1. Press +
2. Press -
3. Temp +
4. Temp -